

# Texi Champion SB

Instruction manual



 ***texi***

## SAFETY RULES

- Before operating the appliance read the manual carefully. It contains important advices for safe and efficient use and maintenance of the appliance.
  - Please keep the manual, warranty card, proof of purchase and, where possible, the original packaging. If you want to pass the appliance to another person - give it together with instruction manual and warranty card.
  - After unpacking, make sure that the appliance is not damaged. In case of doubt, contact an authorized service.
  - Do not leave plastic bags, pieces of foam, staples, etc., remaining after unpacking the appliance within the reach of children or persons with reduced psychophysical efficiency.
- WARNING!** Do not allow children to play with foil. Danger of suffocation!
- Safe use of this appliance will only be possible when it is properly connected to a grounded electrical system. Supplier / Distributor shall not be liable for any damages arising from connecting to the installation, which fails to meet safety requirements.
  - Before connecting the appliance make sure that the voltage on the rating plate complies with the mains voltage. In case of doubt, contact a qualified electrician.
  - It is not recommended to use adapters, splitters and extension cords. If necessary, use only certified accessories, corresponding to current safety standards, making sure they are appropriate for your electrical system and comply with the technical parameters of the appliance.
  - Connecting the appliance in a manner inconsistent with the instructions threatens your safety and may cause voiding the warranty.
  - Remember:
    - Do not use the appliance barefoot or with wet hands or feet,
    - Do not use the appliance outside,
    - Do not expose the appliance to weathering (sun, rain, wind, ...),
    - Do not allow children or persons with reduced psychophysical efficiency to use the appliance,
    - Never pull the power cord or the appliance to disconnect it from the electric network,
    - Do not leave the appliance connected to the mains, without supervision,
    - Never immerse the appliance in water or other liquids.
  - User cannot exchange electric cable on his own. Contact an authorized service or qualified personnel, if the exchange is necessary.
  - Turn off and unplug the appliance if it breaks down or works incorrectly. Contact an authorized service for repair with use of original spare parts. Do not attempt repairs yourself.
  - To prevent the continued use of the appliance after its worn, unplug it from the mains and cut the electric cord. Follow local rules for disposal of waste.
  - Seller / Distributor shall not be liable for any damage caused to persons, animals or things by improper connection or resulting from misuse, improper or excessive use.
  - **This appliance is not a toy!**



### Directive 2002/96/EC (Waste Electrical and Electronic Equipment – WEEE) – information for users

This product complies with EU Directive 2002/96/EC.

The crossed-out dustbin symbol on the appliance means that at the end of its useful lifespan, the product must be disposed separately from ordinary household wastes. The user is responsible for delivering the appliance to an appropriate collection facility at the end of its useful lifespan. Appropriate separate collection to permit recycling, treatment and environmentally compatible disposal helps prevent negative impact on the environment and human health and promotes recycling of the materials making up the product.


For more information on available collection facilities, contact your local waste service or the shop where you bought the appliance.

# INSTRUCTION MANUAL

## GENERAL INFORMATION

**Texi Champion SB** – suction and blowing ironing board with a heated surface. Chrome treated metal structure makes it exceptionally strong and stable.

### Construction of the table

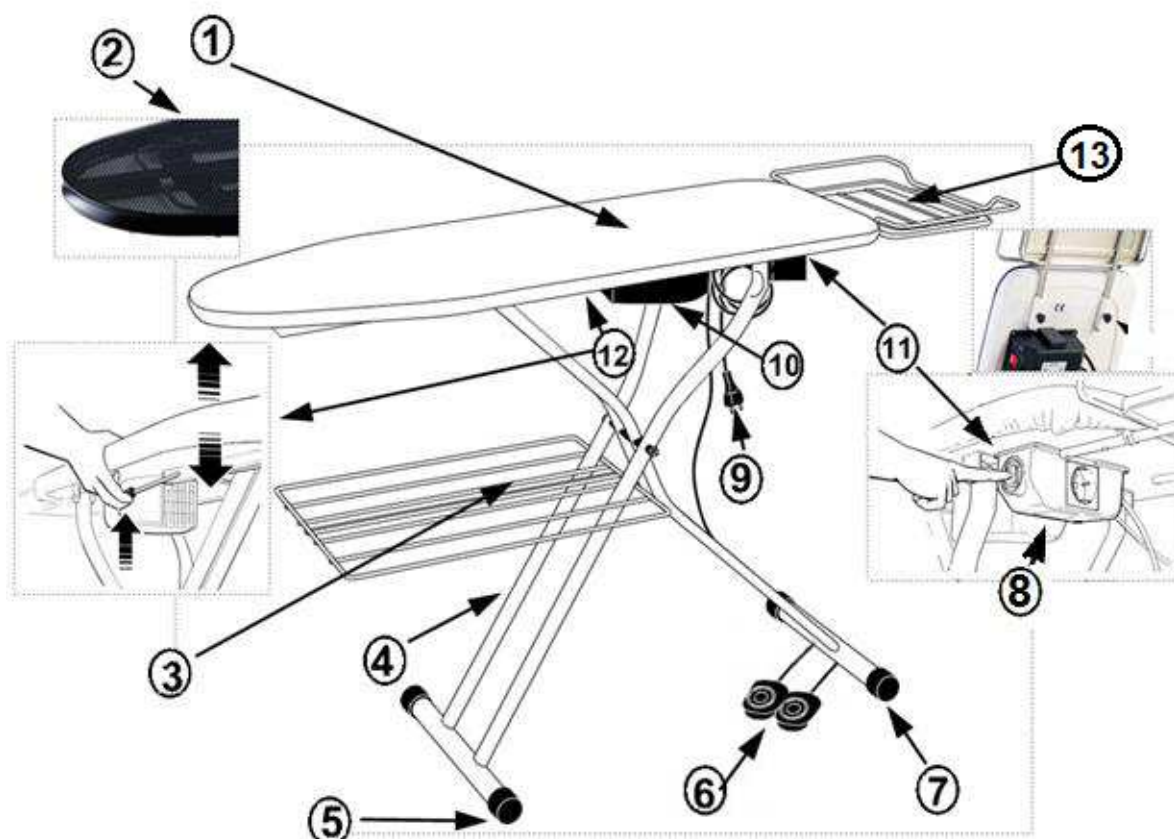

- 1 Heated surface
- 2 Small mesh wire net board
- 3 Laundry container
- 4, 7 Legs
- 5 Anti-slip caps
- 6 Suction / blowing regulation double pedal
- 8 Detail of small housing with outlet
- 9 Plug
- 10 Motor
- 11 On/off switch
- 12 Height regulation lever
- 13 Storage tray

### **Technical data**

Power supply: 230 V

Ironing surface: 45 x 120 cm

Heater power: 400 W


Suction motor power: 40 W

Weight: 18 kg

Measurements of the table ready to use: 46 x 150 x 91 cm

Measurement of the folded table: 46 x 15 x 163 cm

## USAGE

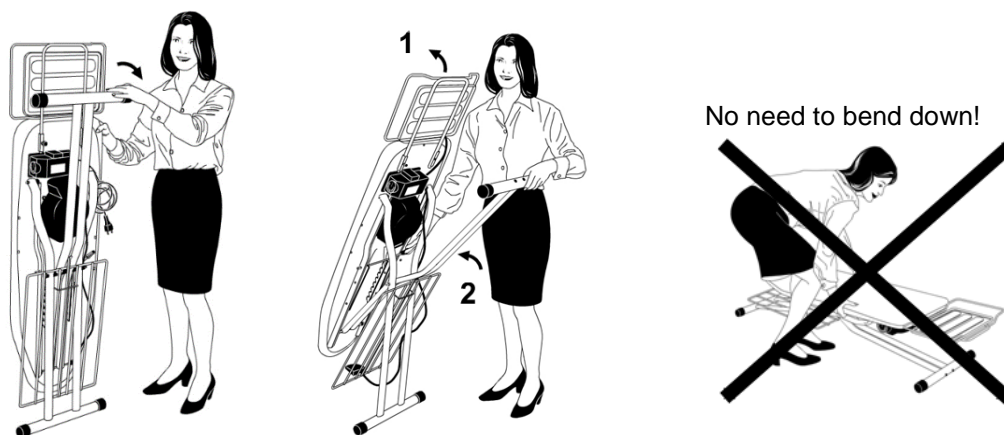

### The advantages

- no more rising steam or odors during ironing time
- no more condensation with consequent leakage of drops of water under the board.
- very dry and well ironed linen, essential for keeping garments perfect
- shorter work time, because even delicate materials remain adherent to the work surface.

### Switching on

Push the on/off switch.

### The suction function

One part of the double pedal placed on the floor makes it possible to work with suction function, which holds the garment being ironed onto the board, thus preventing wrinkles in the material and also drying out any remaining dampness. This also completely eliminates steam rising upwards.

### The blowing function

The other part of the double pedal is used for blowing function.

### The steam generator / iron storage space

This is of standard size, thus ensuring the necessary space for any kind of iron or small steam generator.

### Space-saving

The ironing board is spacious, wide and stable when standing open and it has 8 possible height positions.

### How to open

When the board is in the vertical position and the storage tray for the iron is on top, pull the back foot upwards to the height desired. If it should be necessary to change the height later, this can be done by first putting the board back to its original position.

### Use

1. Insert the plug of the ironing board into the appropriate wall socket, after placing the iron / steam generator on its storage tray.
2. Insert the supply cable of the iron / steam generator into an appropriate electrical supply socket.
3. Switch on the red switch (11).

**Note:** After the work is finished, leave the ironing board for approx. 30 minutes, occasionally pushing on the suction pedal to cool down the board. This operation is essential as it prolongs the life of your ironing board.

### Closure

Remove the iron by taking out the plug first. Remove the supply cable of your appliance. Check that no finished garments have been left on the storage shelf underneath. Lift the board back into the vertical position, press the knob and pull the back legs towards the board.



Distributor:

--