

Parts book


TEXI WALKER WF SERVO
TEXI WALKER WF AUT

HD *texi*®

CONTENTS

A. Casting mechanism.....	1
B. Needle bar & thread take-up mechanism.....	3
C. Presser foot mechanism.....	5
D. Feed mechanism.....	7
E. Upper feed mechanism.....	10
F. Hook mechanism.....	13
G. Lubrication mechanism.....	15
H. Thread trimming mechanism.....	17
I. Reverse stitching mechanism.....	19
J. Presser foot lifter mechanism for TEXI Walker WF AUT.....	20
K. Accessories.....	22


A. Casting mechanism

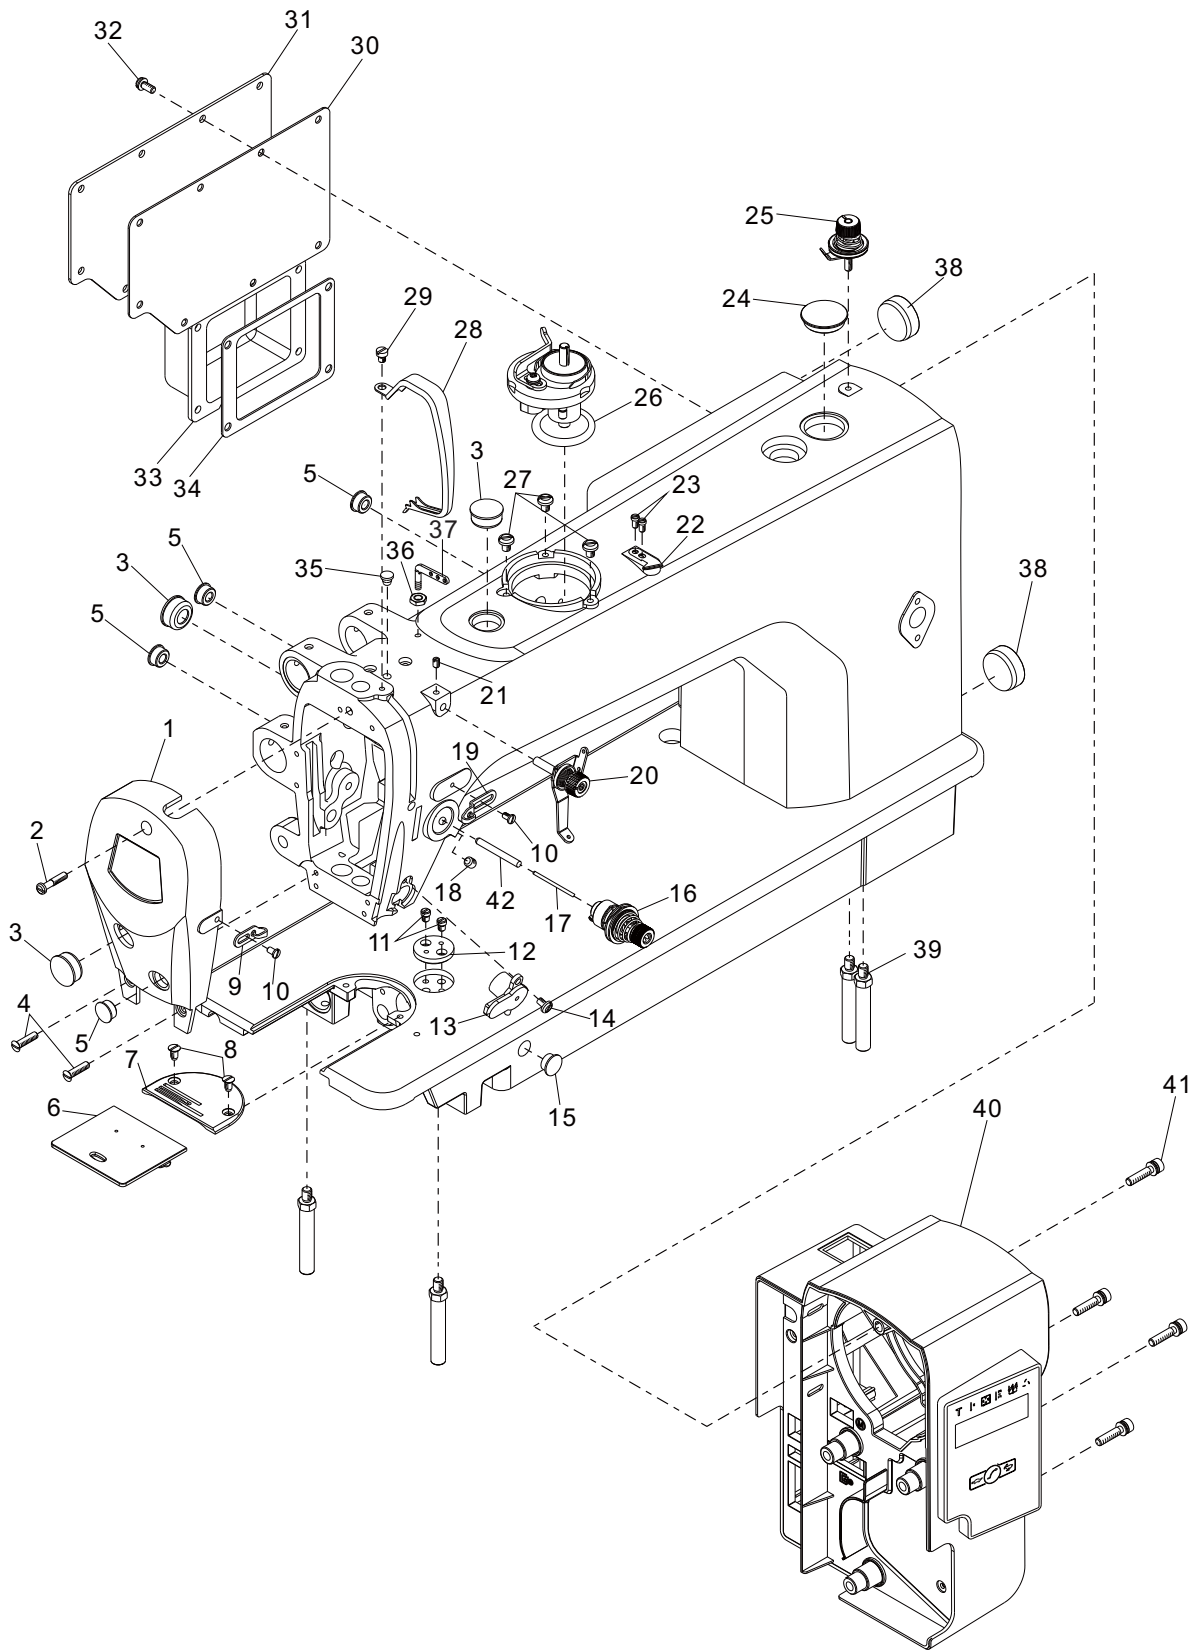

A. Casting mechanism

Ref. No.	Part No.	Description	QTY	Remark
1	20017920	Face plate	1	
2	10043309	Screw	1	
3	10043315	Rubber plug	3	
4	10048790	Screw	2	
5	10013171	Rubber plug	4	
6	10043597	Slid plate assy.	1	
7	10043304	Needle plate	1	
8	10043305	Screw	2	
9	10040996	Thread guide	1	
10	10043312	Screw	2	
11	10004374	Screw SM11/64"×40	2	
12	10004373	Scale base plate	1	
13	10051583	Bobbin thread tension ASM.	1	Texi Walker WF AUT
	10052840	Lower thread-guide	1	Texi Walker WF Servo
14	10010595	Screw M4×7.5	1	
15	10049739	Rubber plug	1	
16	10054478	Thread tension bracket assy.	1	
17	10052339	Tension release pin	1	Texi Walker WF Servo
	10051109	Tension release pin	1	Texi Walker WF AUT
18	10010678	Screw	1	
19	10043594	Thread guide	1	
20	10052960	Bobbin thread tension ASM.	1	
21	10045042	Set screw	2	
22	10011149	Knife	1	
23	10050423	Screw SM9/ 64"× 40	1	
24	10045754	Rubber plug	1	
25	10051431	Bobbin thread tension	1	
26	10031086	Bobbin winder	1	
27	10004380	Screw SM3/ 16"× 32	1	
28	20019074	Thread take-up lever cover	1	
29	10043360	Screw	1	
30	10051344	Side plate gasket	1	
31	20017919	Side plate	1	
32	10010030	Screw	10	
33	20019092	Solenoid cover	1	Texi Walker WF Servo
	20016032	Solenoid cover	1	Texi Walker WF AUT
34	10046248	Washer	1	
35	10043311	Rubber plug	1	
36	10012620	Nut	1	
37	10013602	Three-hole thread retainer	1	
38	10043588	Rubber plug(Φ27)	2	
39	10002577	Screw stud	4	
40	10062391 TEXI	Electronics control ASM. QD629	1	Texi Walker WF Servo
	10062383 TEXI	Electronics control ASM. QD628	1	Texi Walker WF AUT
41	10053435	Screw	4	
42	10046133	Pressure release lead	1	


B. Needle bar & thread take-up mechanism

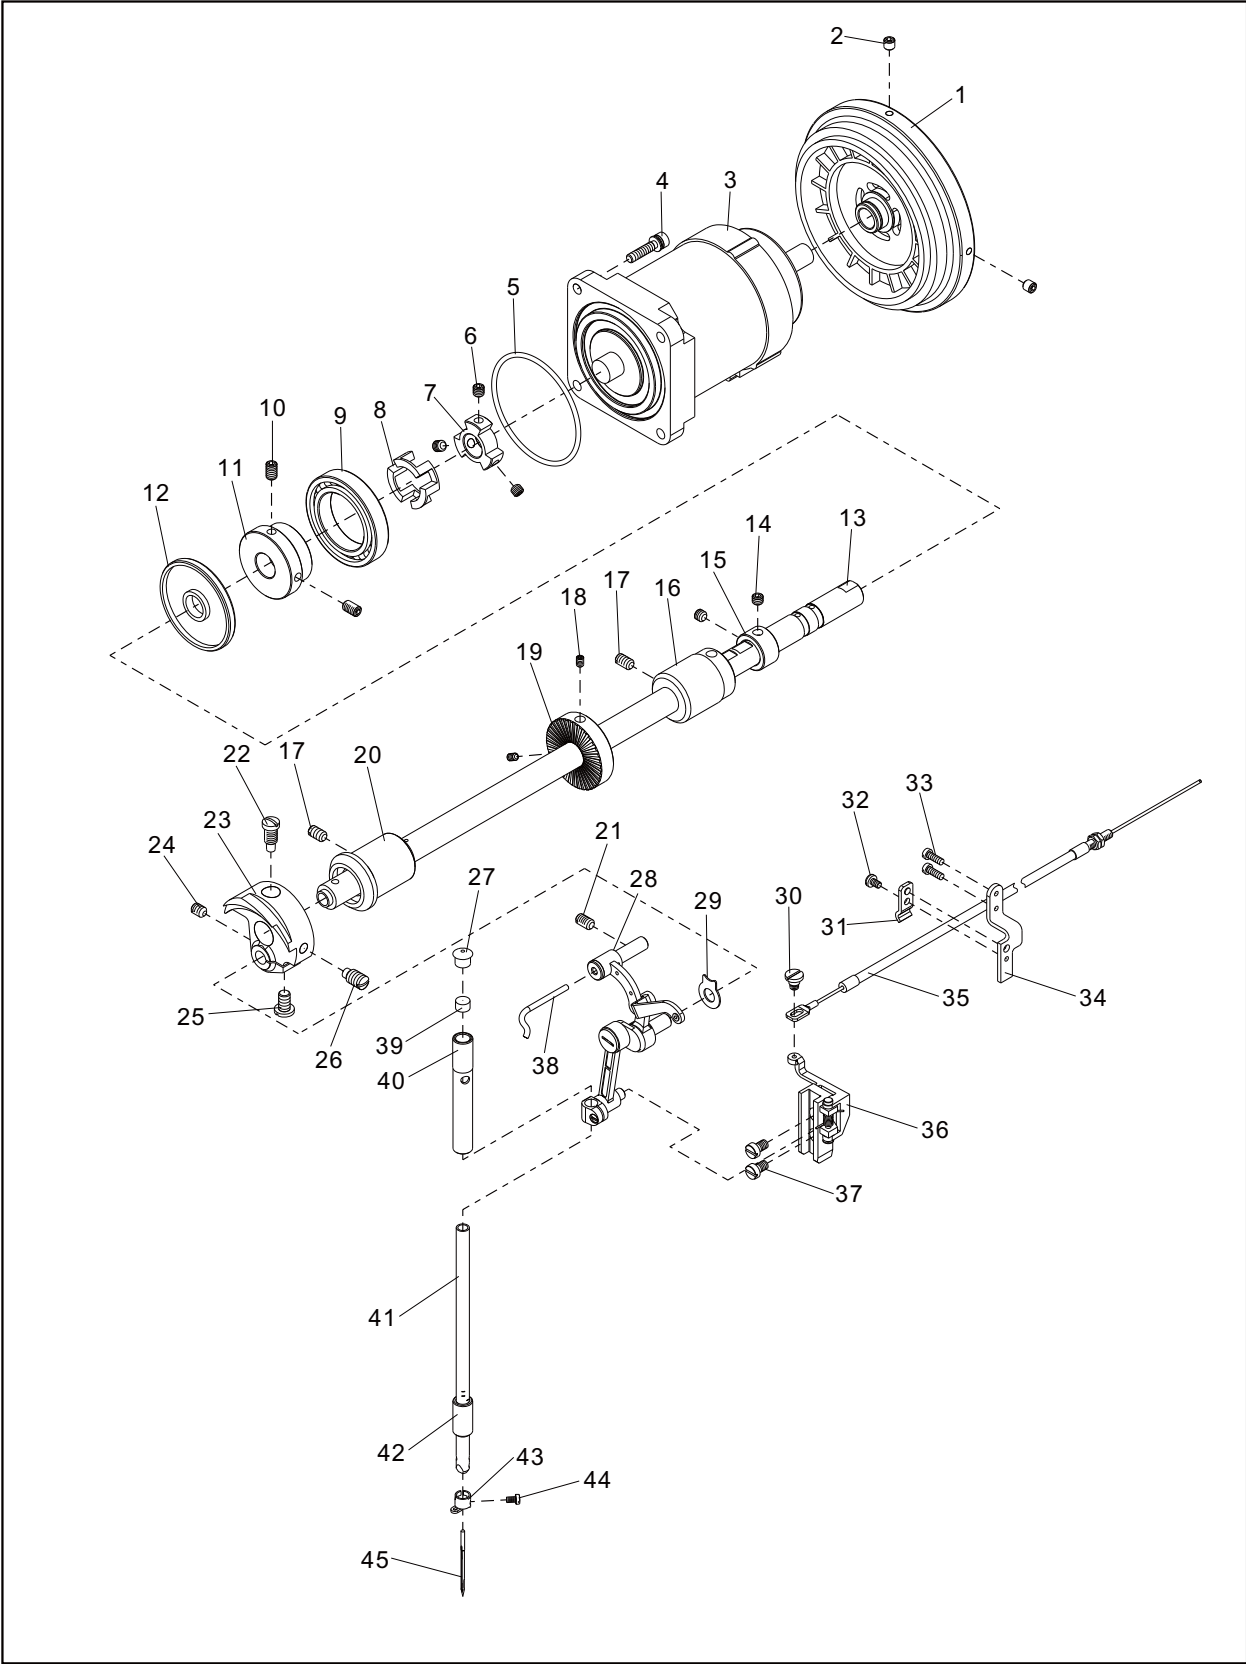

B. Needle bar & thread take-up mechanism

Ref. No.	Part No.	Description	QTY	Remark
1	20019071	Hand wheel	1	
2	10011232	Screw	2	
3	10053349	Motor	1	
4	10006157	Screw	4	
5	10003796	O ring	1	
6	10011232	Screw M6× 6	3	
7	10008908	Coupling ASM.	1	
8	10008909	Washer	1	
9	10024755	Bush.R	1	
10	10012161	Screw M6×0.75×10	2	
11	10046144	Connector	1	
12	10008803	Oil seal	1	
13	10051146	Pper shaft	1	
14	10012162	Screw M5× 5	2	
15	10051603	Collar	1	
16	10043332	Bush.M	1	
17	10010506	Screw	2	
18	10045042	Screw	2	
19	10045041	Screw SM9/32"×28	1	
20	10043335	Bush.L	1	
21	10043333	Screw	1	
22	10050400	Screw	1	
23	10043341	Thread take-up crank	1	
24	10043329	Screw	1	
25	10043340	Screw	1	
26	10010082	Screw	1	
27	10010587	Rubber cap	1	
28	10049432	Thread take-up lever set	1	
29	10043357	Washer	1	
30	10046141	Screw	1	Texi Walker WF AUT
31	10046135	Wire holder.D	1	Texi Walker WF AUT
32	10013518	Screw	1	Texi Walker WF AUT
33	10043556	Screw	2	Texi Walker WF AUT
34	10046150	Wire holder.U	1	Texi Walker WF AUT
35	10051112	Tension release wire	1	Texi Walker WF AUT
36	10050045	Needle bar slider guide rail assembly	1	Texi Walker WF AUT
	10055937	Needle bar slider guide rail	2	Texi Walker WF Servo
37	10043360	Screw	1	
38	10008062	Oil wick	1	
39	10043375	Felt	1	
40	10043362	Bush.U	1	
41	10051161	Needle bar	1	
42	10043365	Bush.D	1	
43	10005945	Thread guide	1	
44	10043367	Screw	1	
45	*	Needle	1	


C. Presser foot mechanism

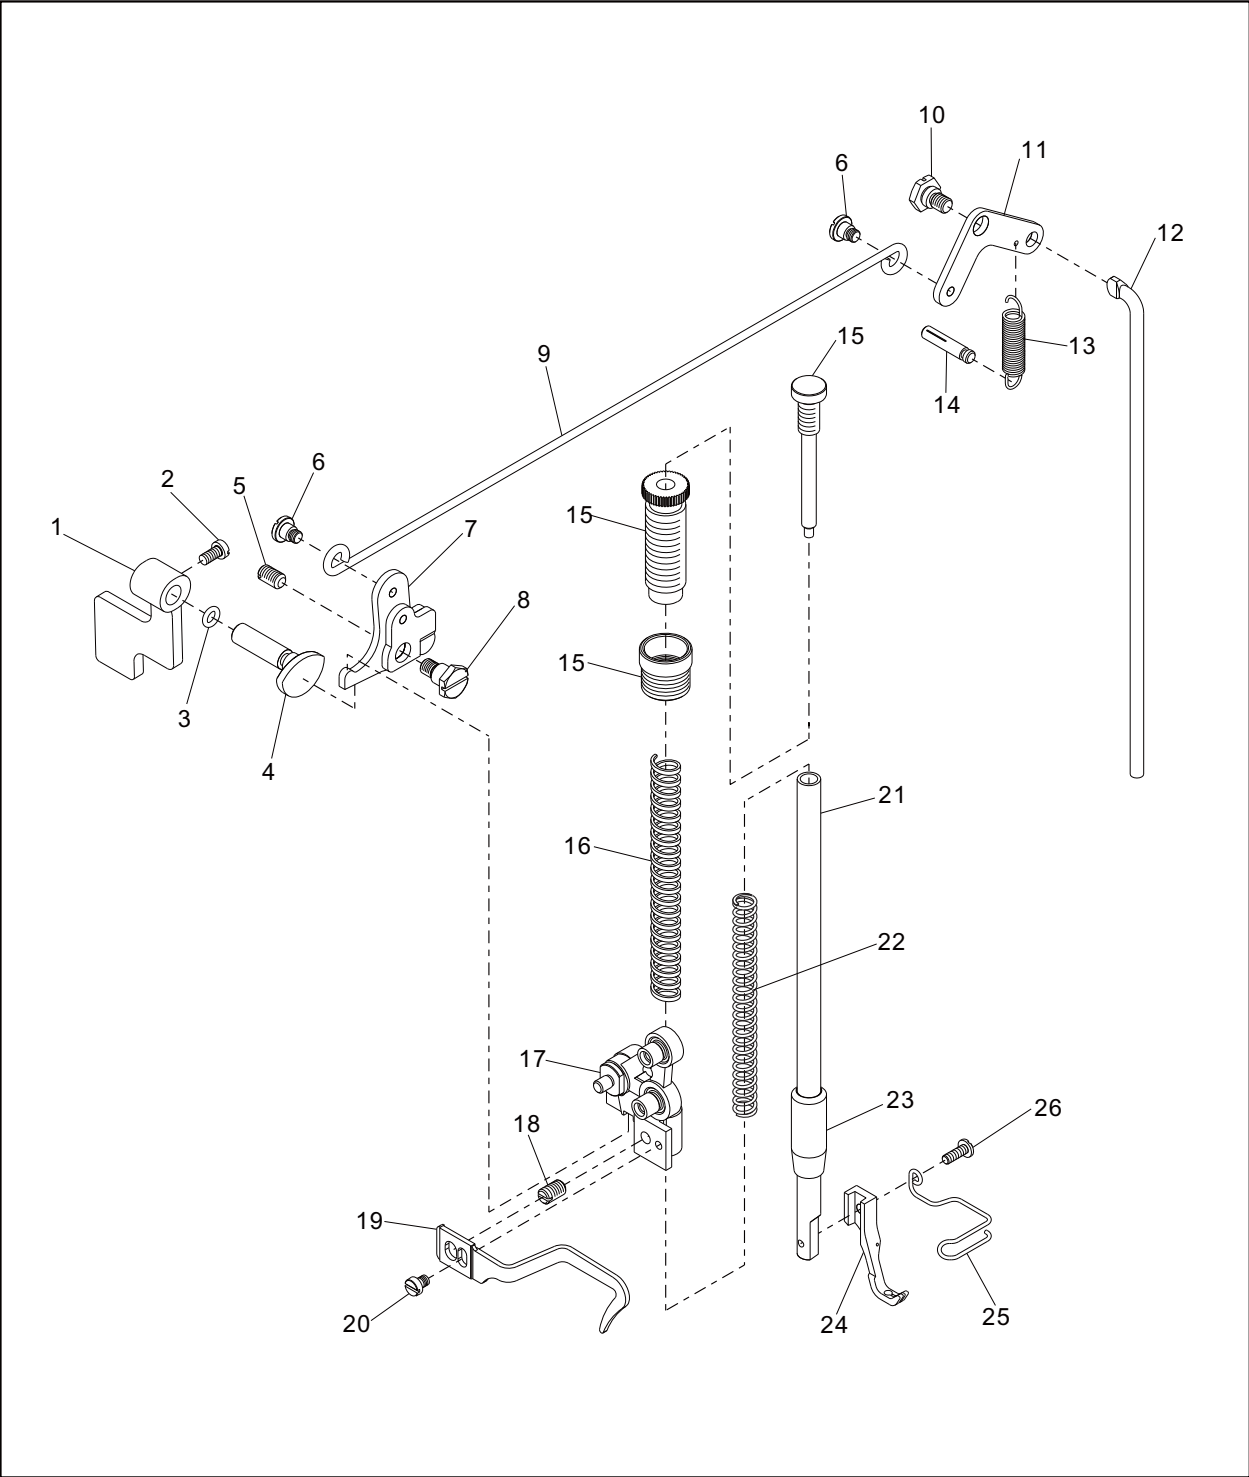

C. Presser foot mechanism

Ref. No.	Part No.	Description	QTY	Remark
1	10051473	Presser bar lifter	1	
2	10043360	Screw	1	
3	10050063	O ring	1	
4	10043476	Lifter crank	1	
5	10006264	Screw	2	
6	10043483	Screw	2	
7	10048832	Guide plate assembly	1	
8	10043482	Screw	1	
9	10051153	Collecting rod	1	
10	10043460	Screw	1	
11	10043459	Lever	1	
12	10051154	Knee lifter bar	1	
13	10043462	Spring	1	
14	10043461	Spring hook	1	
15	10057425	Adjusting screw	1	
16	10053357	Spring	1	
17	10050006	Guide bracket assembly	1	
18	10043333	Screw	1	
19	10051605	Thread guide	1	
20	10043467	Screw	1	
21	10051160	Presser bar	1	
22	10046174	Pressure regulating spring	1	
23	10043471	Bush	1	
24	10043473	Presser foot	1	
25	10043474	Protective hook	1	
26	10010650	Screw	1	

D. Feed mechanism

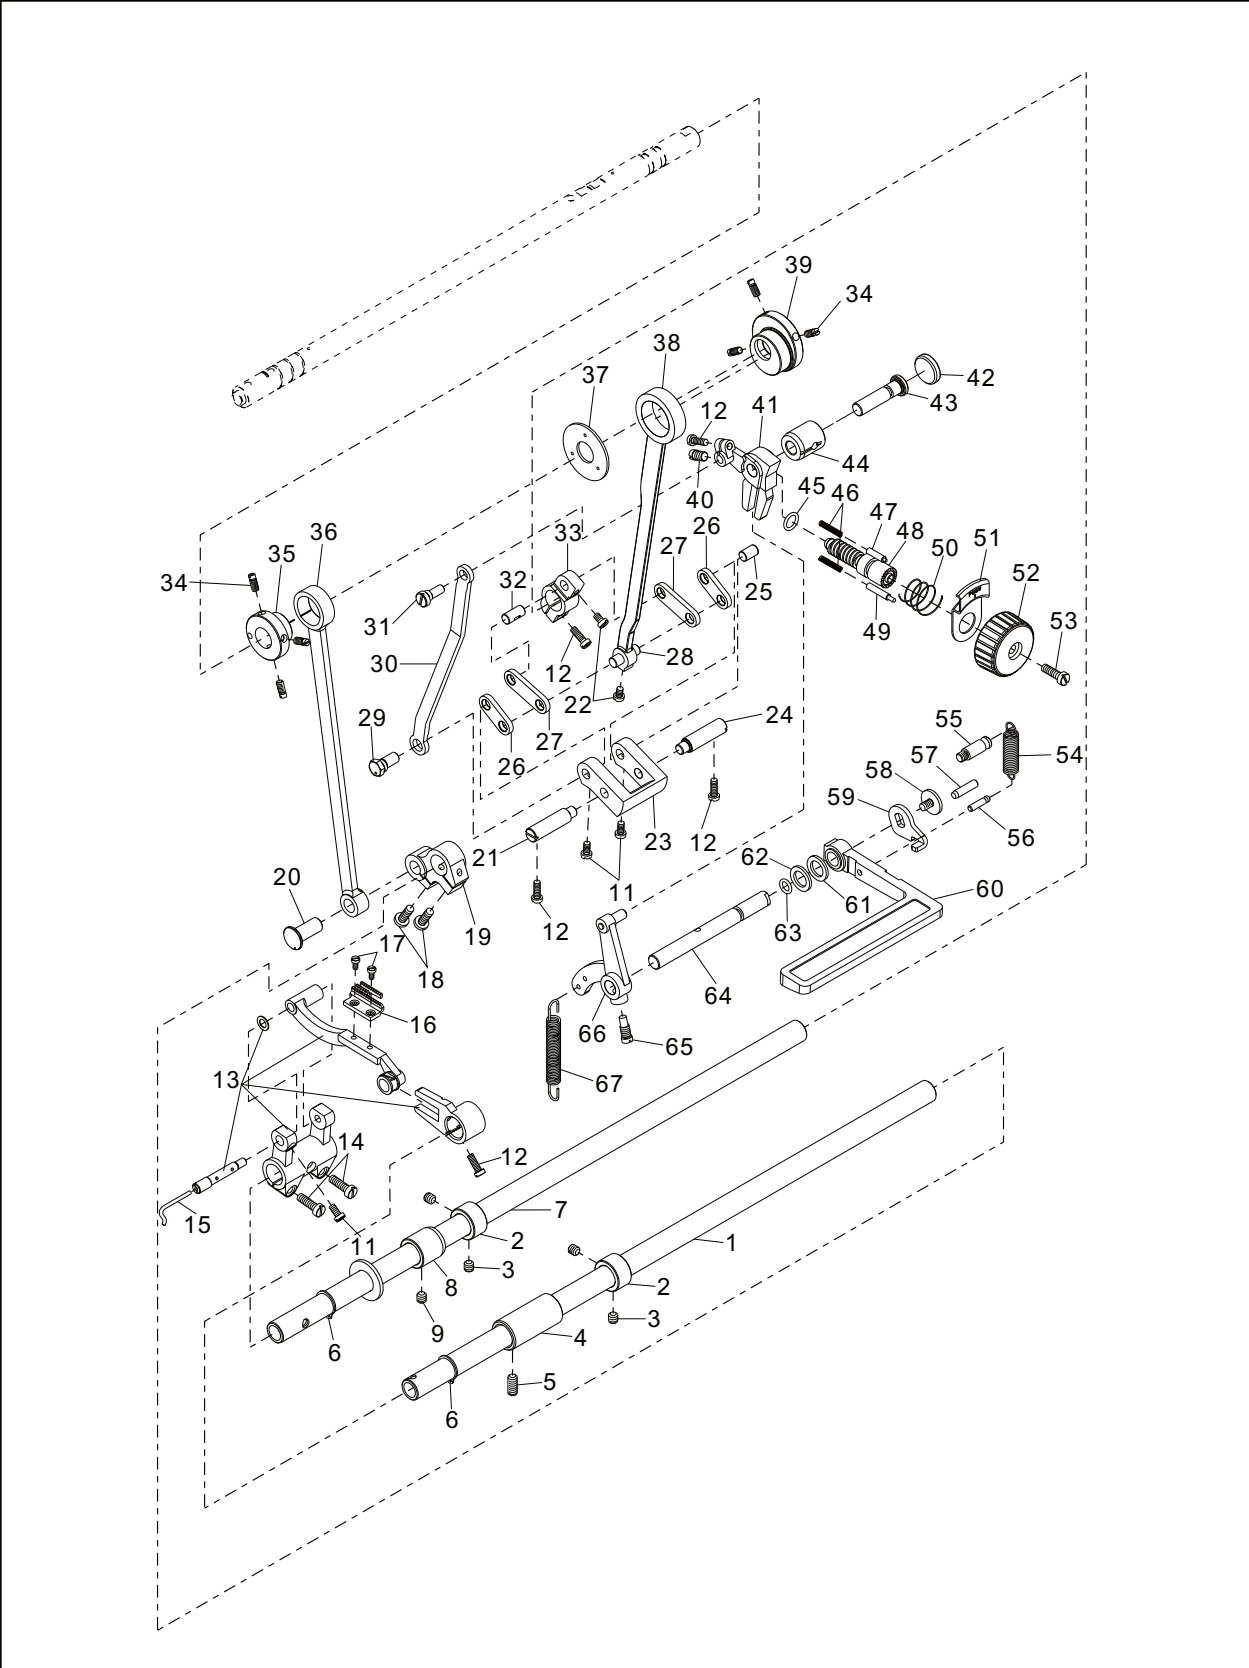


D. Feed mechanism

Ref. No.	Part No.	Description	QTY	Remark
1	10051151	Shaft	1	
2	10043330	Collar	2	
3	10023200	Screw	4	
4	10044997	Bush	1	
5	10043398	Screw	1	
6	10003290	Retaining ring 15	2	
7	10051149	Feed shaft	1	
8	10044998	Bush	1	
9	10006264	Screw	1	
11	10043360	Screw	3	
12	10043396	Screw	5	
13	10057281	Feed bar	1	
14	10043401	Screw	2	
15	10008067	Oil wick $\phi 2$	1	
16	10043410	Feed dog	1	
17	10043411	Screw	2	
18	10046263	Screw	2	
19	10046170	Feed lifting arm	1	
20	10043403	Pin	1	
21	10051102	Pin shaft.L	1	
22	10043415	Set screw	2	
23	10051163	Feed regulator crank	1	
24	10043438	Pin shaft.R	1	
25	10052651	Shaft	1	
26	10043434	Link	2	
27	10043433	Link	2	
28	10043432	Stud	1	
29	10051145	Shaft	1	
30	10051162	Connecting rod	1	
31	10043421	Connecting stud	1	
32	10043416	Stud	1	
33	10043414	Feed rocker arm	1	
34	10043378	Screw	6	
35	10043379	Eccentric wheel	1	
36	10051150	Feed lifting rod	1	
37	10043376	Holder	1	
38	10051148	Feed connecting rod	1	
39	10043429	Feed cam	1	
40	10043445	Screw.S	1	
41	10046168	Feed regulator	1	
42	10043451	Rubber cap	1	
43	10045098	Shaft	1	

D. Feed mechanism

Ref. No.	Part No.	Description	QTY	Remark
44	10044999	Bush	1	
45	10045702	O ring	1	
46	10043447	Spring	2	
47	10052174	Positioning pin	1	
48	10046162	Adjusting screw	1	
49	10043446	Stopper pin	1	
50	10043444	Spring	1	
51	10052959	Stopper	1	
52	10043442	Needle pitch	1	
53	10010281	Screw SM3/16" x 28	1	
54	10046166	Spring	1	
55	10046164	Spring hook	1	
56	10046163	Spring hook PIN	1	
57	10051966	Pin	1	
58	10043428	Screw	1	
59	10051737	Plate	1	
60	20019072	Reverse stitching lever	1	
61	10042518	Washer	1	
62	10045168	Washer	1	
63	10014461	O ring	1	
64	10046161	Shaft	1	
65	10043425	Screw	1	
66	10046172	Pin assy.Lever	1	
67	10046158	Spring	1	

E. Upper feed mechanism

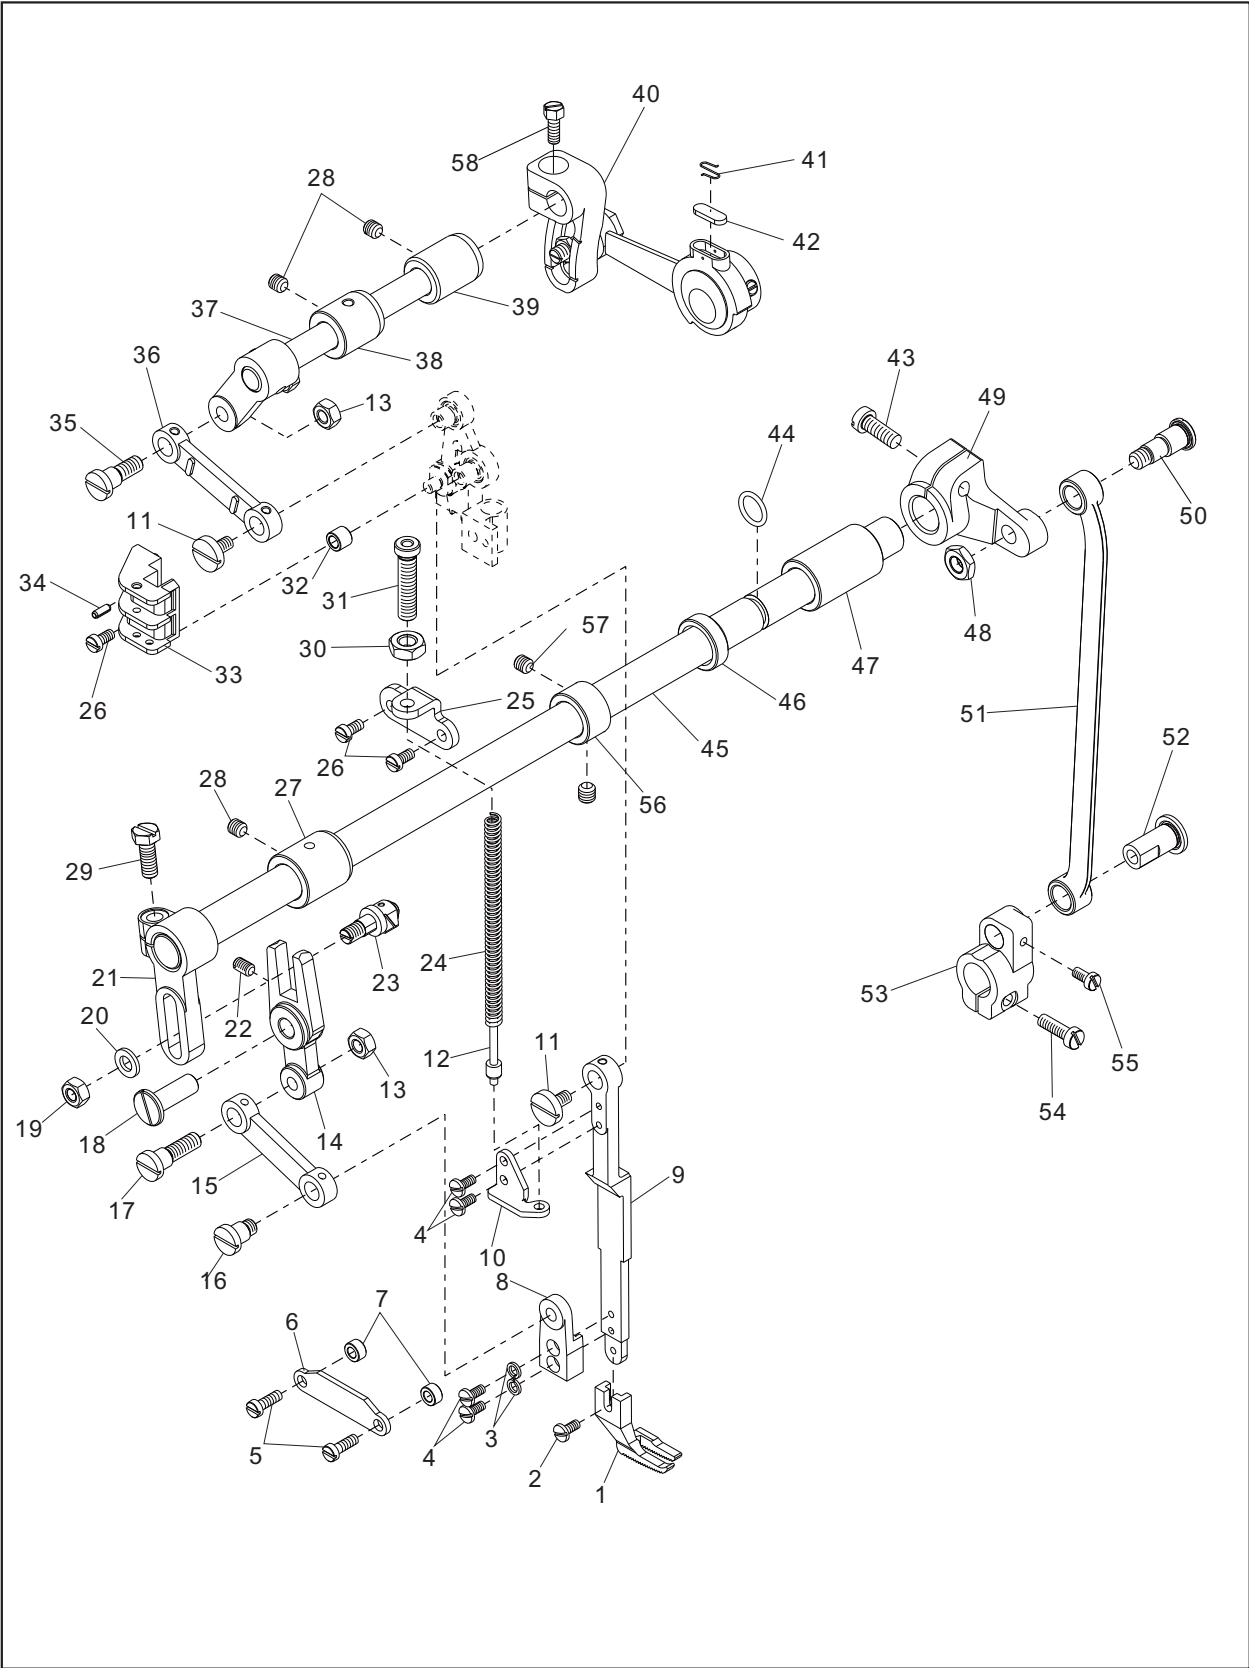


E. Upper feed mechanism

Ref. No.	Part No.	Description	QTY	Remark
1	10043506	Waking foot	1	
2	10043507	Screw	1	
3	10002991	Washer 4	2	
4	10010018	Screw SM9/64"×40	4	
5	10043396	Screw	2	
6	10051152	Rod guide	1	
7	10043505	Collar	2	
8	10043503	Clamper	1	
9	10051142	Connecting rod	1	
10	10043490	Holder plate	1	
11	10043512	Screw	2	
12	10043530	Guide shaft	1	
13	10043500	Nut	1	
14	10051140	Lever	1	
15	10051143	Link	1	
16	10043502	Screw	1	
17	10043498	Screw	1	
18	10043496	Shaft	1	
19	10043494	Nut	1	
20	10003086	Washer 6	1	
21	10051156	Crank	1	
22	10026903	Screw	1	
23	10049434	Roller shaft assy	1	
24	10053479	Compression spring	2	
25	10051602	Bracket	1	
26	10043360	Screw	4	
27	10051159	Bush.L	1	
28	10006264	Screw	3	
29	10046185	Screw	1	
30	10043486	Nut	1	
31	10043526	Screw	1	
32	10043509	Roller	1	
33	10043508	Lever guide	1	
34	10007861	Pin 3×8	2	
35	10043513	Screw	1	
36	10043511	Link	1	
37	10049435	Feed lifting shaft assy	1	
38	10043516	Bush	1	
39	10051144	Bush.R	1	
40	10049433	Eccentric wheel mechanism	1	
41	10043524	Spring	1	
42	10043523	Oil felt	1	

E. Upper feed mechanism

Ref. No.	Part No.	Description	QTY	Remark
43	10046184	Screw	1	
44	10045702	O ring	1	
45	10051157	Upper feed shaft	1	
46	10051392	Bush.M	1	
47	10012536	Oil seal	1	
48	10043486	Nut	1	
49	10046188	Feed lifting arm crank.L	1	
50	10043485	Shoulder screw	1	
51	10051141	Connecting rod	1	
52	10043487	Stud	1	
53	10043488	Feed rocker arm	1	
54	10043401	Screw	1	
55	10043360	Screw	1	
56	10043330	Collar	1	
57	10023200	Screw	2	
58	10050178	Screw	1	


F. Hook mechanism

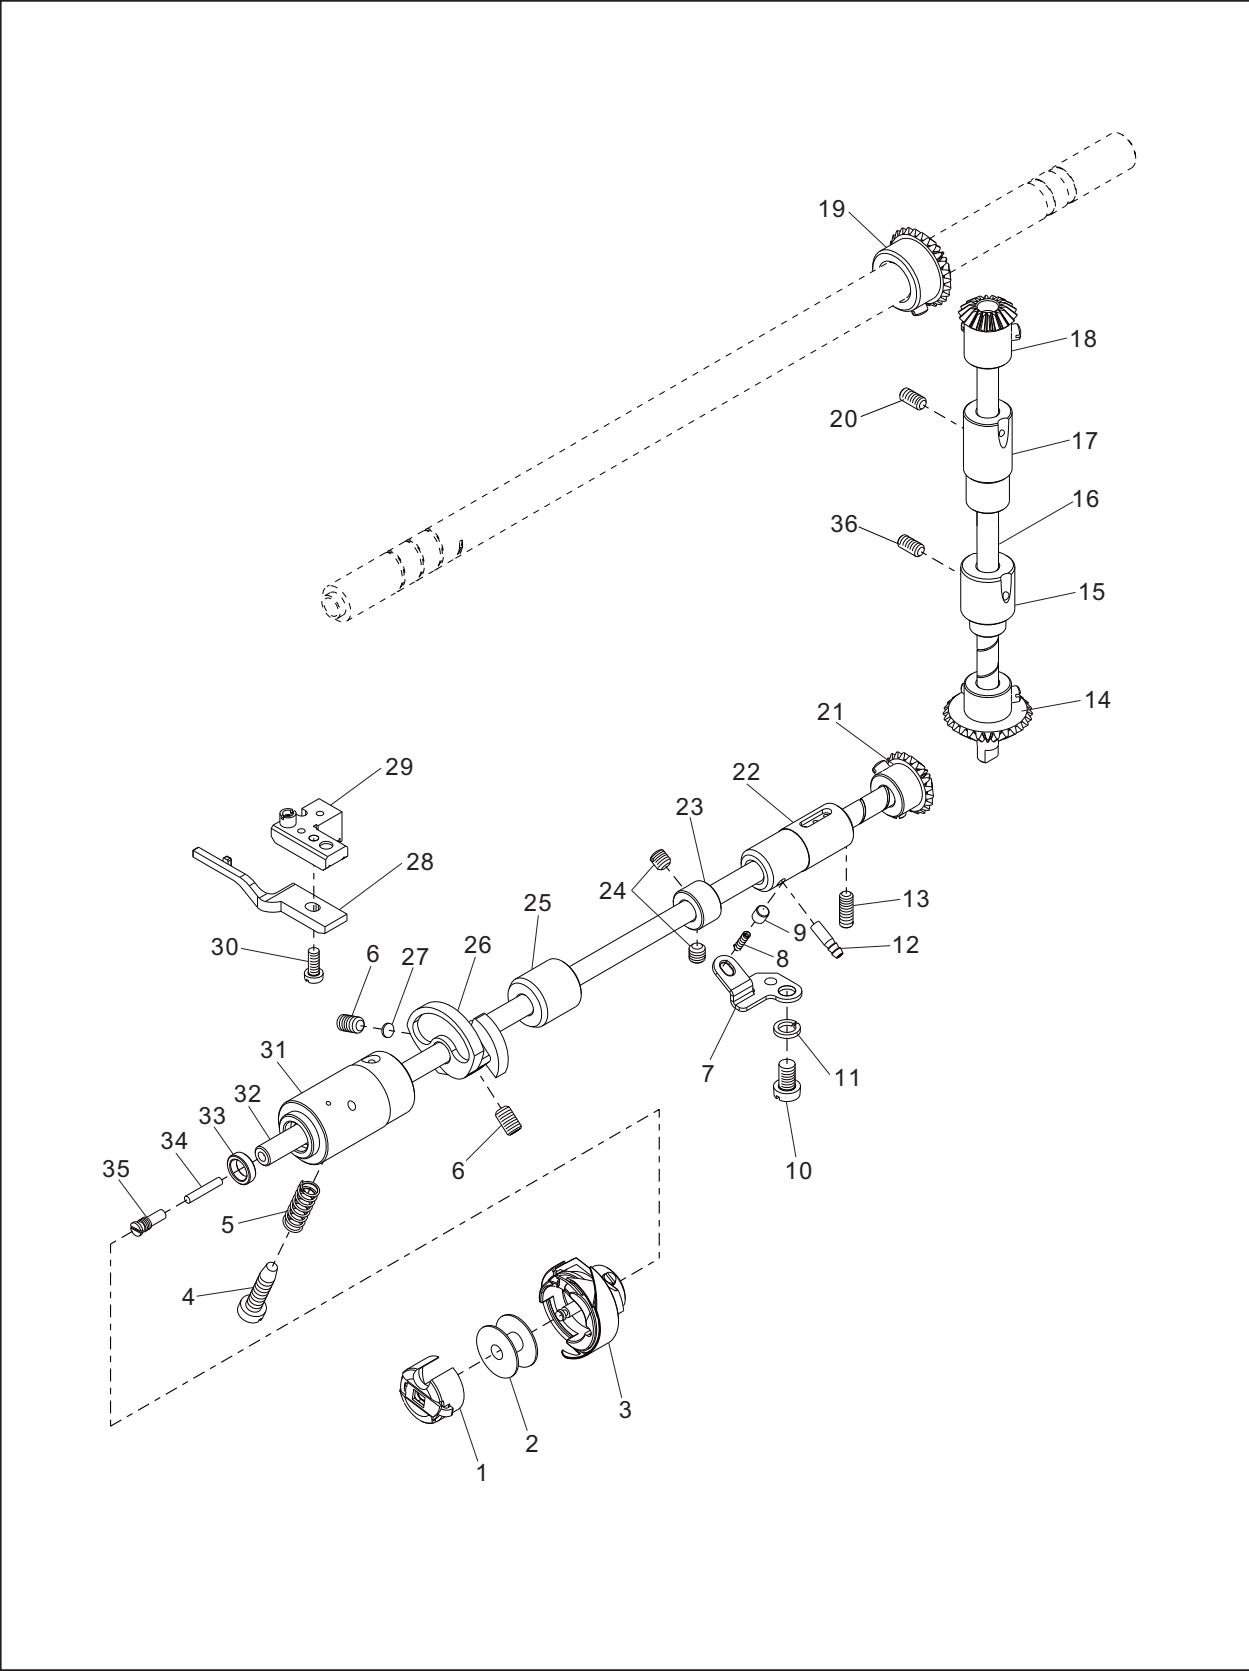

F. Hook mechanism

Ref. No.	Part No.	Description	QTY	Remark
1	10007390	Bobbin case	1	Texi Walker WF Servo
1	10031867	Bobbin case	1	Texi Walker WF AUT
2	10007138	Bobbin	1	
3	10007008	Hook assy	1	Texi Walker WF Servo
3	10039876	Hook assy	1	Texi Walker WF AUT
4	10043390	Adjusting screw.OIL	1	
5	10043389	Adjusting spring	1	
6	10046048	Screw	2	Texi Walker WF AUT
7	10043417	Holder plate	1	
8	10043418	Spring	1	
9	10043419	Plunger	1	
10	10044609	Screw	1	
11	10003077	Washer 6	1	
12	10043382	Oil tube	1	
13	10043398	Screw	1	
14	10043373	Bevel gear.vertrical shaft.L	1	
15	10046154	Bush.vertical shaft.L	1	
16	10051147	Vertical shaft	1	
17	10046151	Bush.vertical shaft.U	1	
18	10043368	Bevel gear.vertrical shaft.U	1	
19	10043328	Bevel gear.upper shaft	1	
20	10010506	Screw SM15/64" × 28	2	
21	10043374	Bevel gear.lower shaft	1	
22	10043381	Bush.lower shaft.R	1	
23	10043402	Collar	1	
24	10043412	Screw	2	
25	10046152	Bush.lower shaft.M	1	
26	10046243	Trimmer driving cam	1	Texi Walker WF AUT
27	10023739	Holder plate	1	
28	10031256	B/case holder position bracket	1	Texi Walker WF AUT
29	10057279	Holder f-knife	1	Texi Walker WF AUT
	10050664	Holder f-knife	1	Texi Walker WF Servo
30	10043405	Screw	1	
31	10046156	Bush.lower shaft.L	1	
32	10051155	Lower shaft	1	
33	10013029	Oil seal	1	
34	10010063	Filter	1	
35	10010064	Screw SM3/16" × 32	1	
36	10013538	Screw SM15/64" × 28	1	


G. Lubrication mechanism

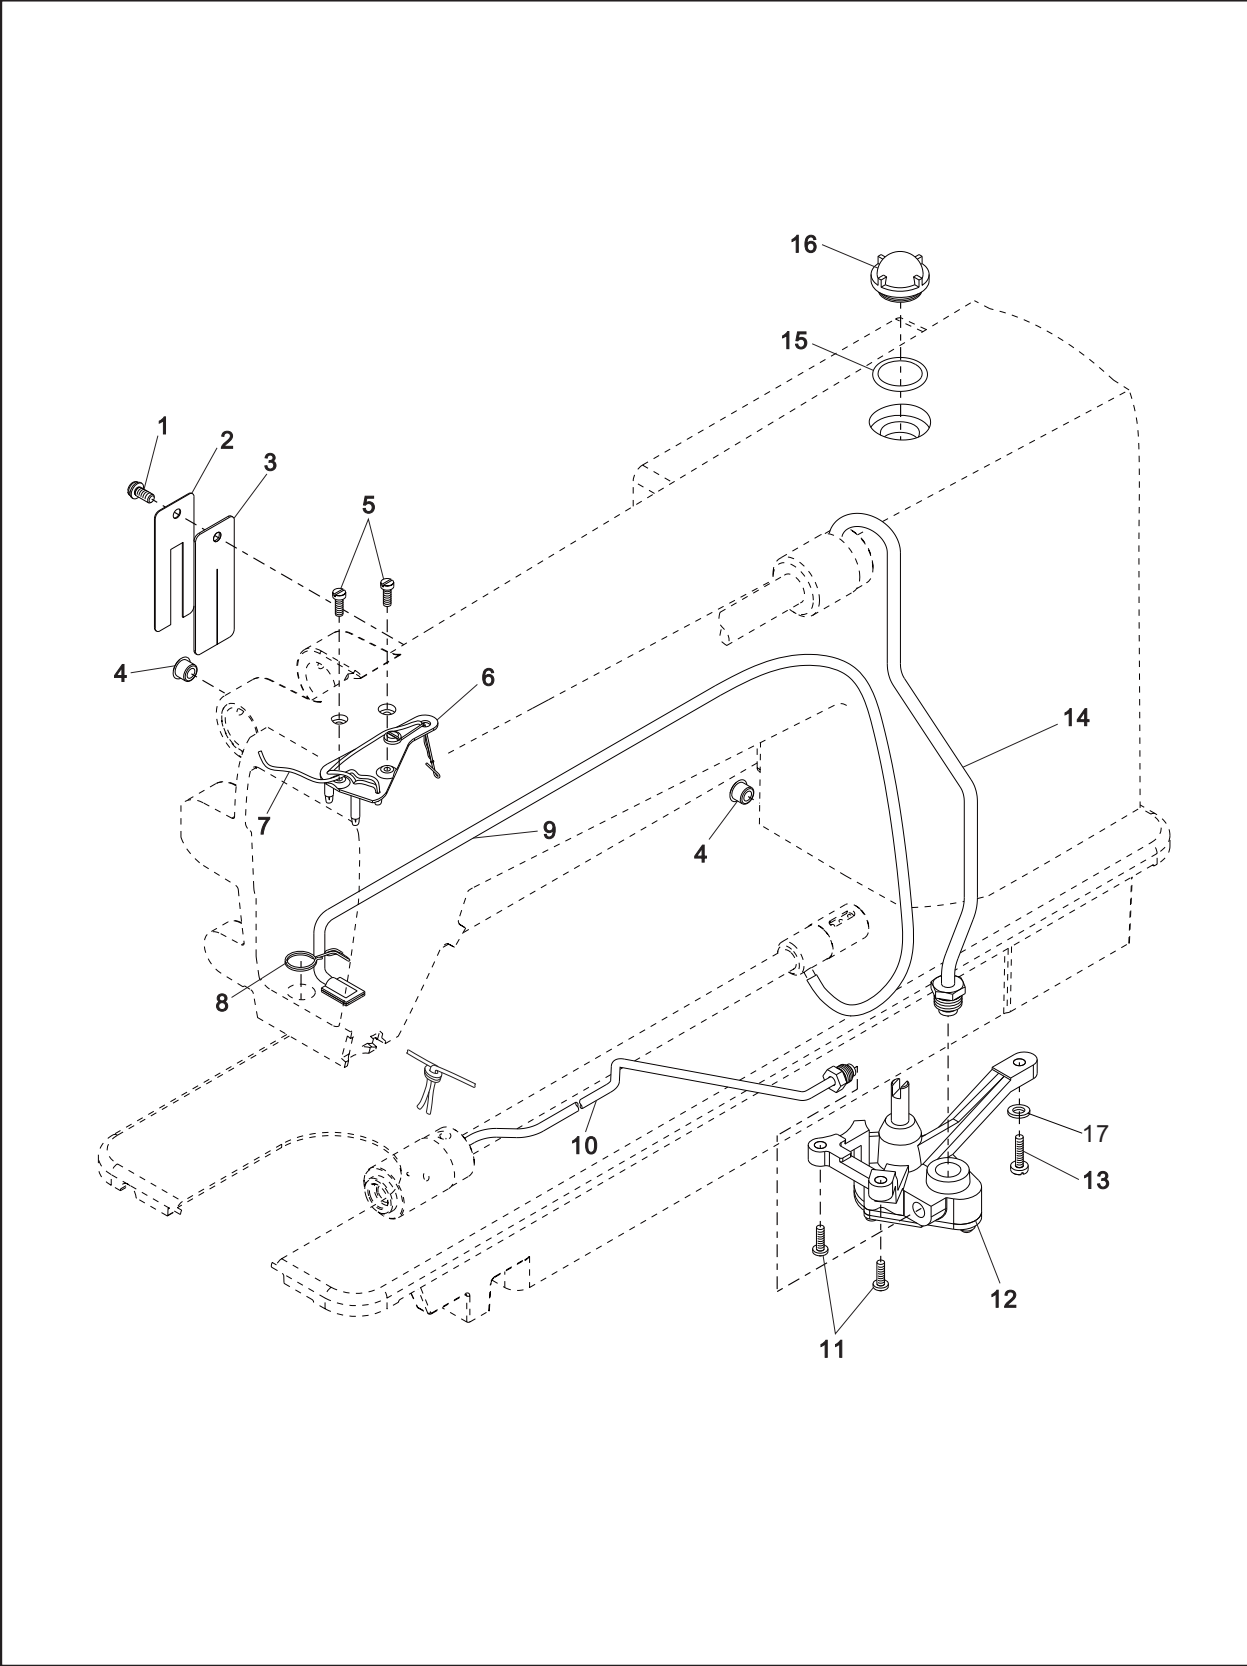

G. Lubrication mechanism

Ref. No.	Part No.	Description	QTY	Remark
1	10043467	Screw	1	
2	20019223	Oil pan	1	
3	10051343	Felt	1	
4	10008943	Rubber cap	2	
5	10043556	Screw	2	
6	10051773	Setting plate	1	
7	10008062	Oil wick	1	
8	10051861	Holder	1	
9	20015653	Tube assy	1	
10	10051327	Oil tube.L	1	
11	10043555	Screw	2	
12	10043546	Pump assy	1	
13	10050474	Screw	1	
14	10051325	Oil tube.U	1	
15	10043319	O ring	1	
16	10043318	Oil gauge window	1	
17	10006115	Washer	1	


H. Thread trimming mechanism

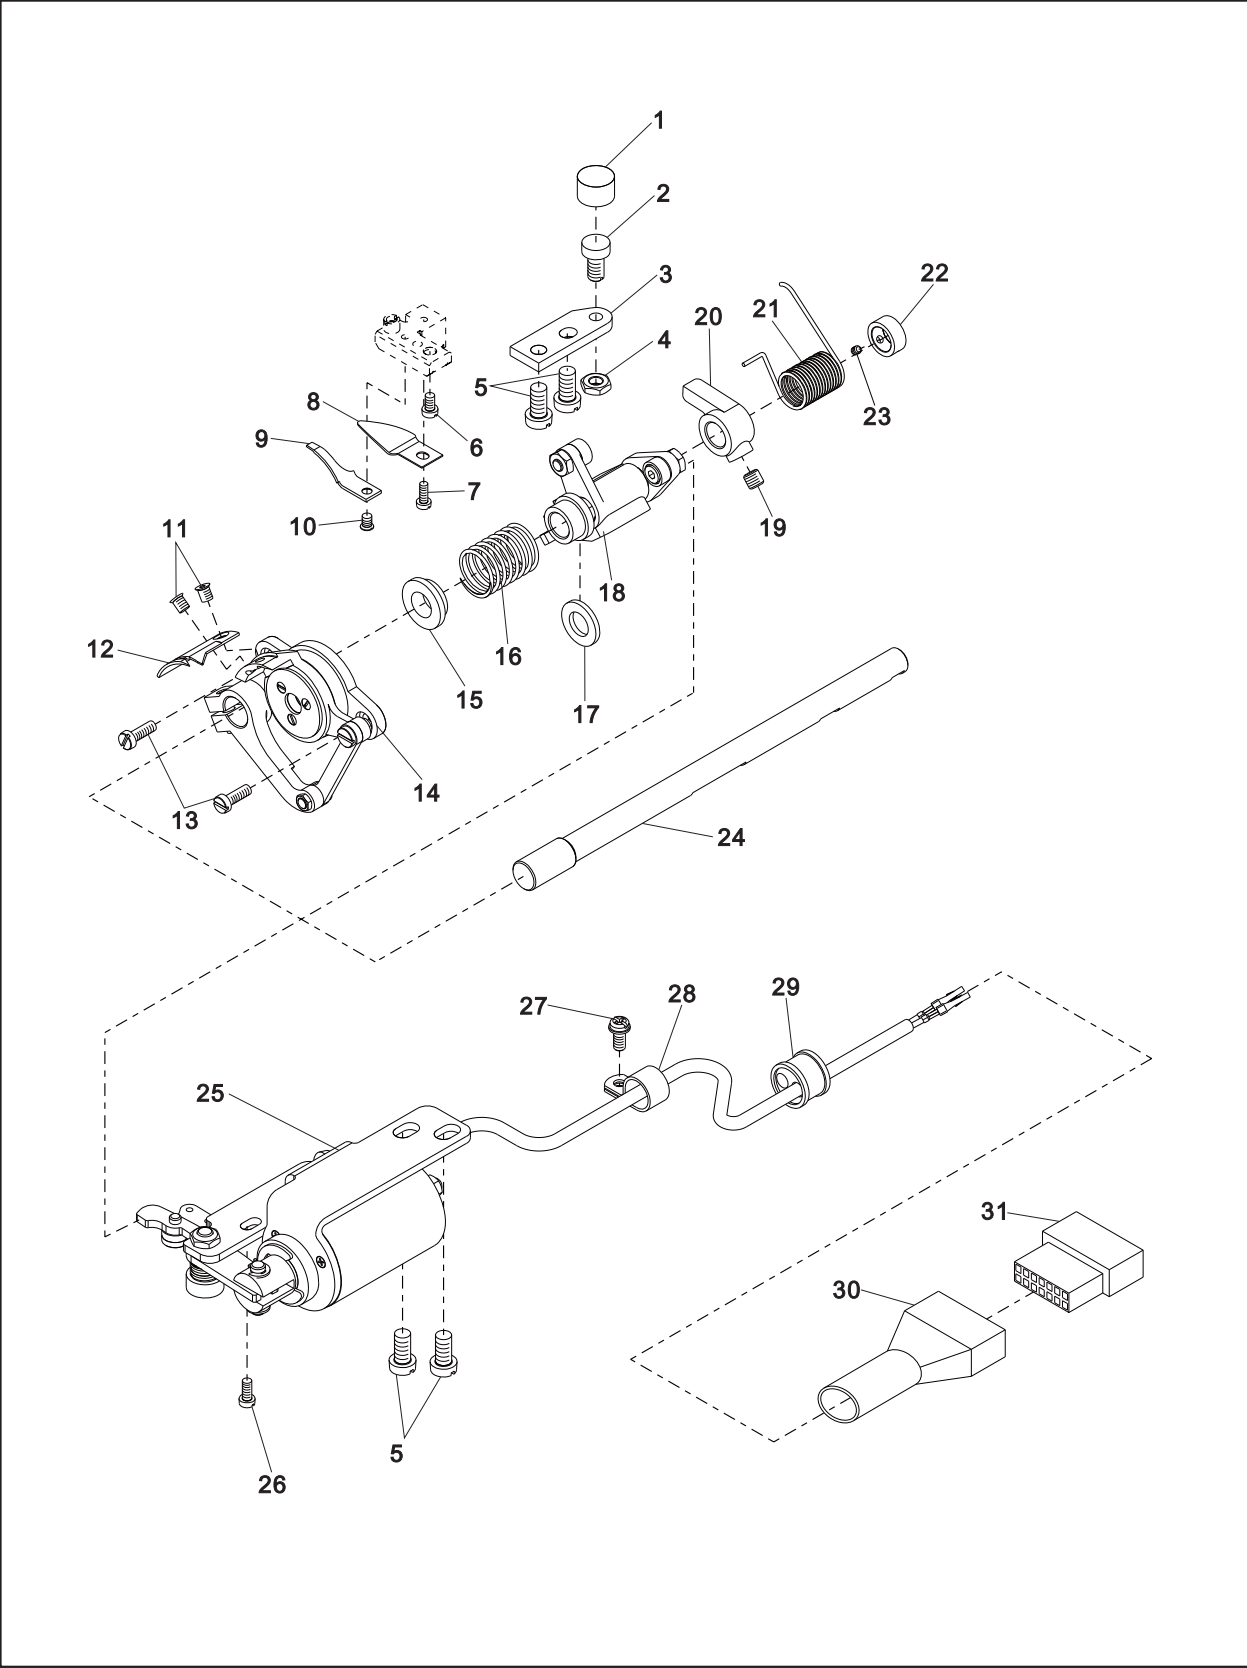

H. Thread trimming mechanism


Ref. No.	Part No.	Description	QTY	Remark
1	10046242	Packing	1	Texi Walker WF AUT
2	10046241	Screw	1	Texi Walker WF AUT
3	10046223	Stopper plate	1	Texi Walker WF AUT
4	10046240	Nut	1	Texi Walker WF AUT
5	10045195	Screw	4	Texi Walker WF AUT
6	10043360	Screw	1	
7	10050584	Screw	1	Texi Walker WF AUT
8	10046206	Lower thread finger	1	Texi Walker WF AUT
9	10046207	Fixed knife	1	Texi Walker WF AUT
10	10011422	Screw SM9/64" x 40	1	Texi Walker WF AUT
11	10011588	Screw SM11/64" x 40	2	Texi Walker WF AUT
12	10046217	Movable knife	1	Texi Walker WF AUT
13	10043360	Screw	2	Texi Walker WF AUT
14	10050153	Round knife bracket assy	1	Texi Walker WF AUT
15	10046221	Collar	1	Texi Walker WF AUT
16	10046222	Spring	1	Texi Walker WF AUT
17	10046228	Plastic ring	1	Texi Walker WF AUT
18	10050044	Thread trimmer cam lever assy	1	Texi Walker WF AUT
19	10013538	Screw SM15/64" x 28	1	Texi Walker WF AUT
20	10046224	Positioning block	1	Texi Walker WF AUT
21	10046225	Spring	1	Texi Walker WF AUT
22	10046226	Collar	1	Texi Walker WF AUT
23	10023200	Screw	1	Texi Walker WF AUT
24	10046219	Thread trimmer cam lever shaft	1	Texi Walker WF AUT
25	10051671	Thread trimmer solenoid assy	1	Texi Walker WF AUT
26	10011101	Screw	1	Texi Walker WF AUT
27	10043325	Screw	1	Texi Walker WF AUT
28	10012464	Wire holder	1	Texi Walker WF AUT
29	10045842	Rubber cap	1	Texi Walker WF Servo
	10051772	Rubber cap	1	Texi Walker WF AUT
30	10046237	Cover	1	Texi Walker WF Servo
	10008407	Cover	1	Texi Walker WF AUT
31	10048314	Connector	1	Texi Walker WF Servo
	10021844	Connector	1	Texi Walker WF AUT

I. Reverse stitching mechanism

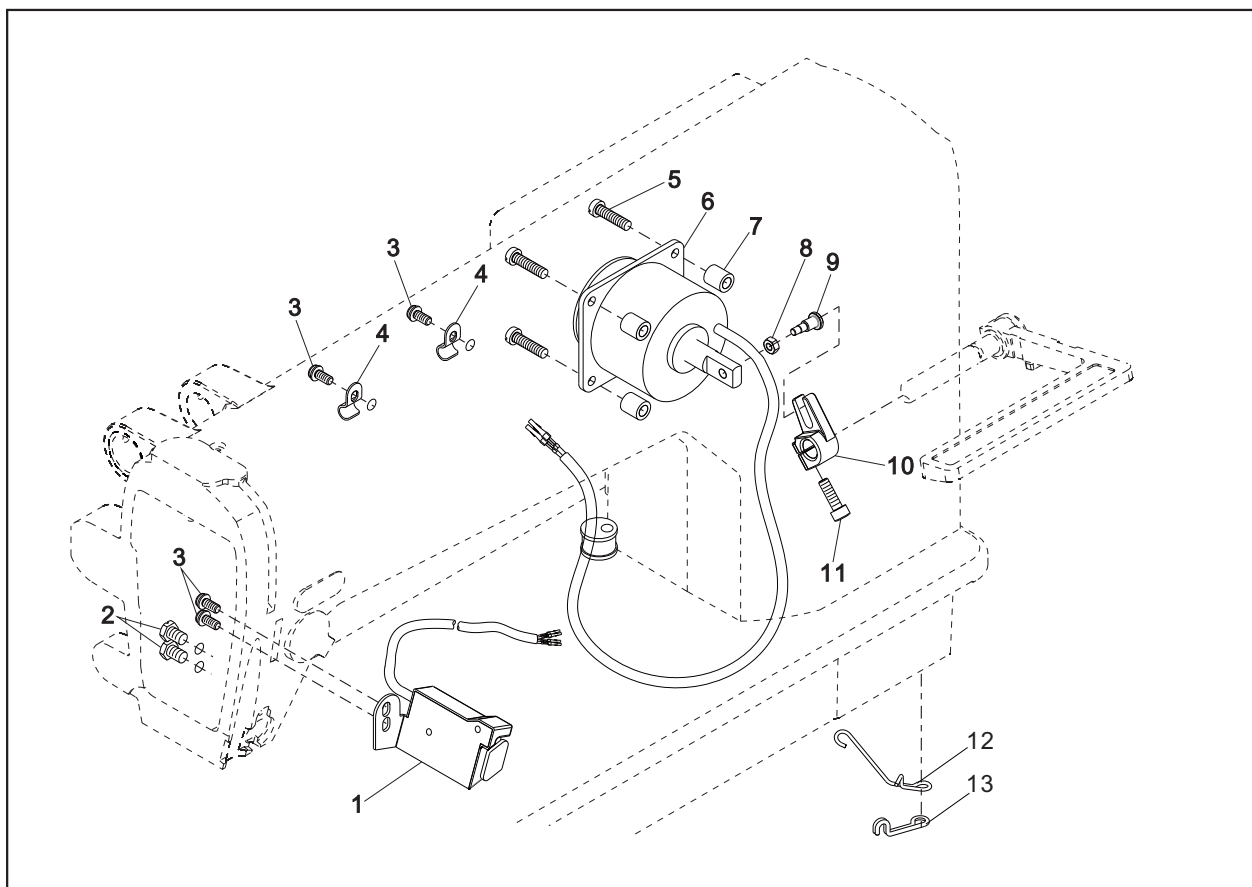

Ref. No.	Part No.	Description	QTY	Remark
1	10054753	Reverse switch assy	1	Texi Walker WF Servo
	10054488	Reverse switch assy	1	Texi Walker WF AUT
2	10000384	Screw SM15/64" × 28	2	
3	10008934	Screw	4	
4	10011302	Cord holder	2	
5	10052565	Screw	4	Texi Walker WF AUT
6	10051106	Quick reverse solenoid assy	1	Texi Walker WF AUT
7	10051604	Space collar	4	Texi Walker WF AUT
8	10009471	Nut	1	Texi Walker WF AUT
9	10055931	Pin	1	Texi Walker WF AUT
10	10051107	Solenoid lever	1	Texi Walker WF AUT
11	10009818	Screw SM3/16" × 32	1	Texi Walker WF AUT
12	10052650	Cord holder	1	Texi Walker WF AUT
13	10052649	Cord holder	1	


J. Presser foot lifter mechanism for TEXI Walker WF AUT

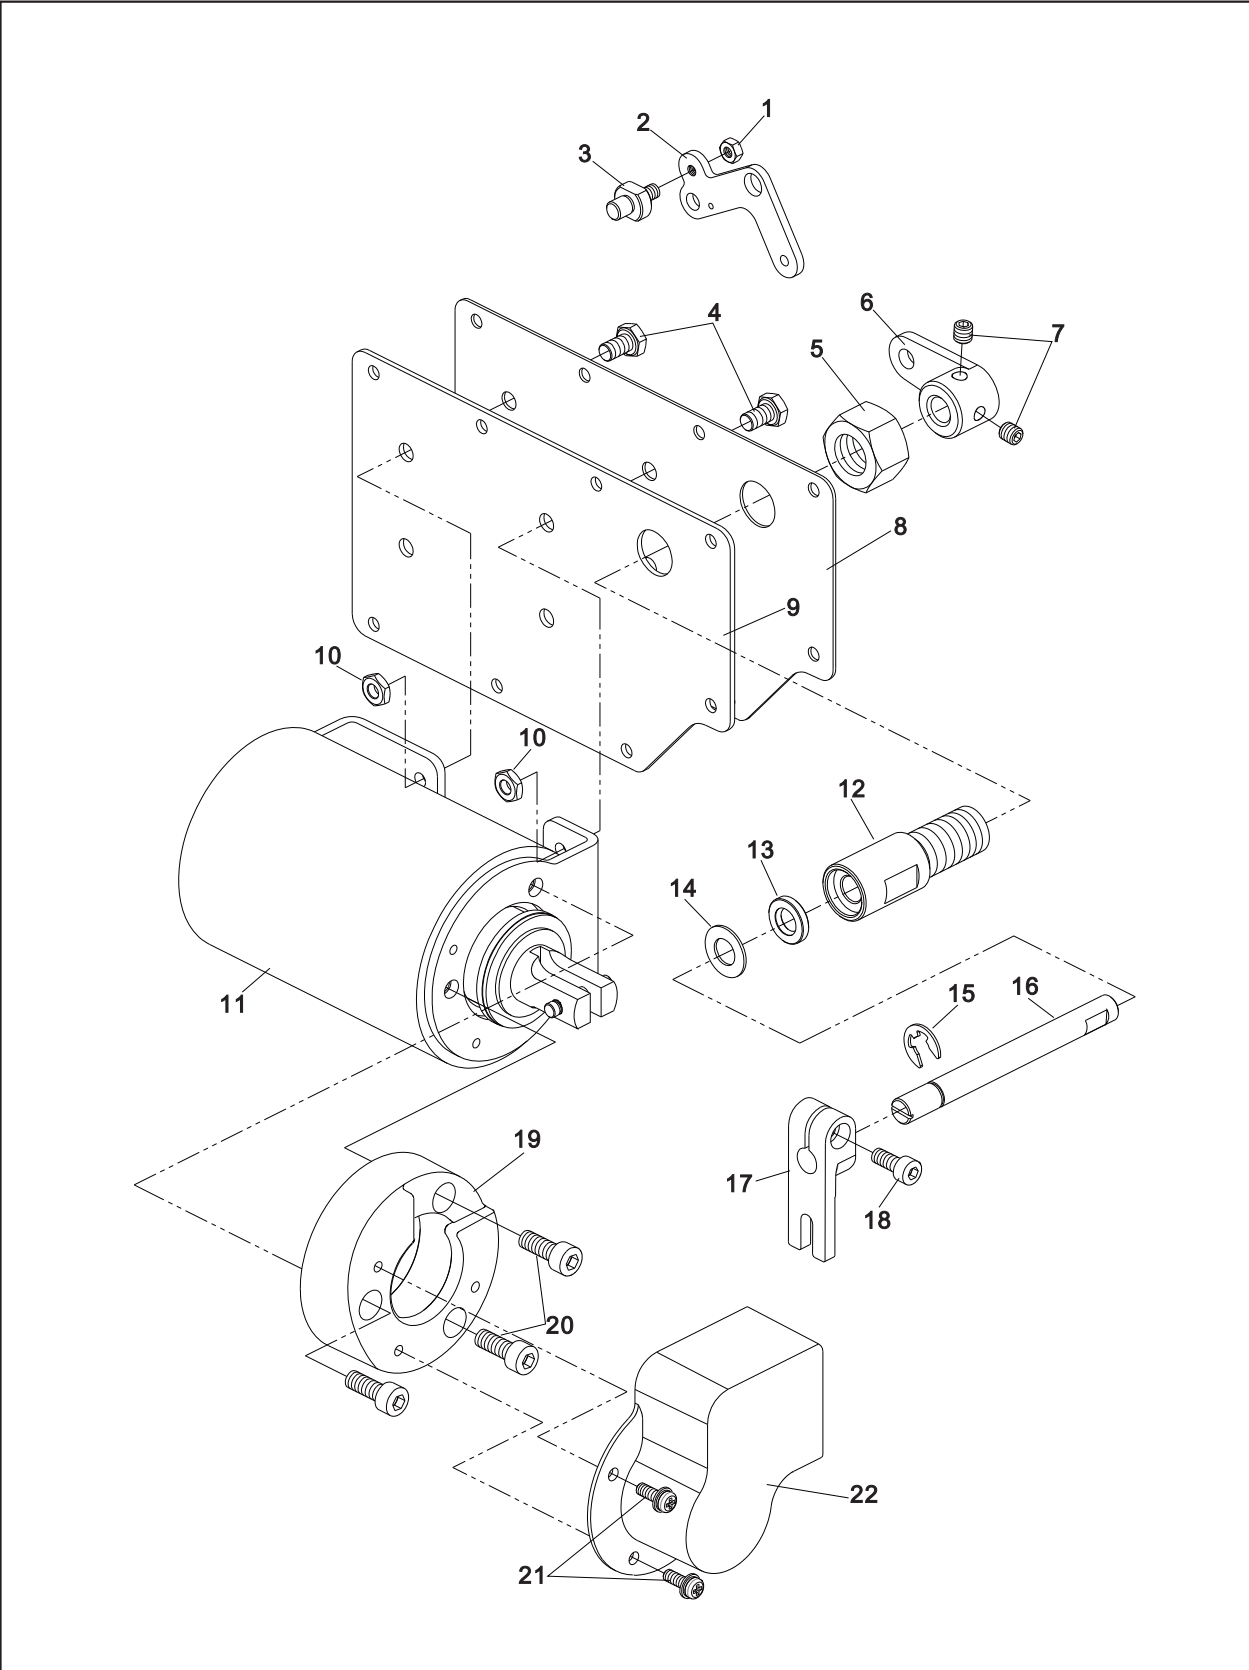

J. Presser foot lifter mechanism for TEXI Walker WF AUT

Ref. No.	Part No.	Description	QTY	Remark
1	10011682	Nut	1	
2	10052492	Lever	1	
3	10052493	Pin	1	
4	10003169	Screw	4	
5	10053187	Nut M16×1.5	1	
6	10052496	Presser foot rod	1	
7	10003151	Screw M6×6	2	
8	10052505	Side plate gasket	1	
9	20018808	Side plate	1	
10	10003032	Nut	4	
11	10052498	Presser foot electromagnet accy.	1	
12	10052494	Locating bush	1	
13	10013087	Oil seal	1	
14	10013099	Washer	1	
15	10003273	Check ring	1	
16	10052495	Live shaft	1	
17	10052497	Turn connecting rod	1	
18	10003162	Screw M5×12	1	
19	10053157	Limited block	1	
20	10003094	Screw M6×20	3	
21	10056322	Sheath	1	
22	10011199	Screw	3	

K. Accessories

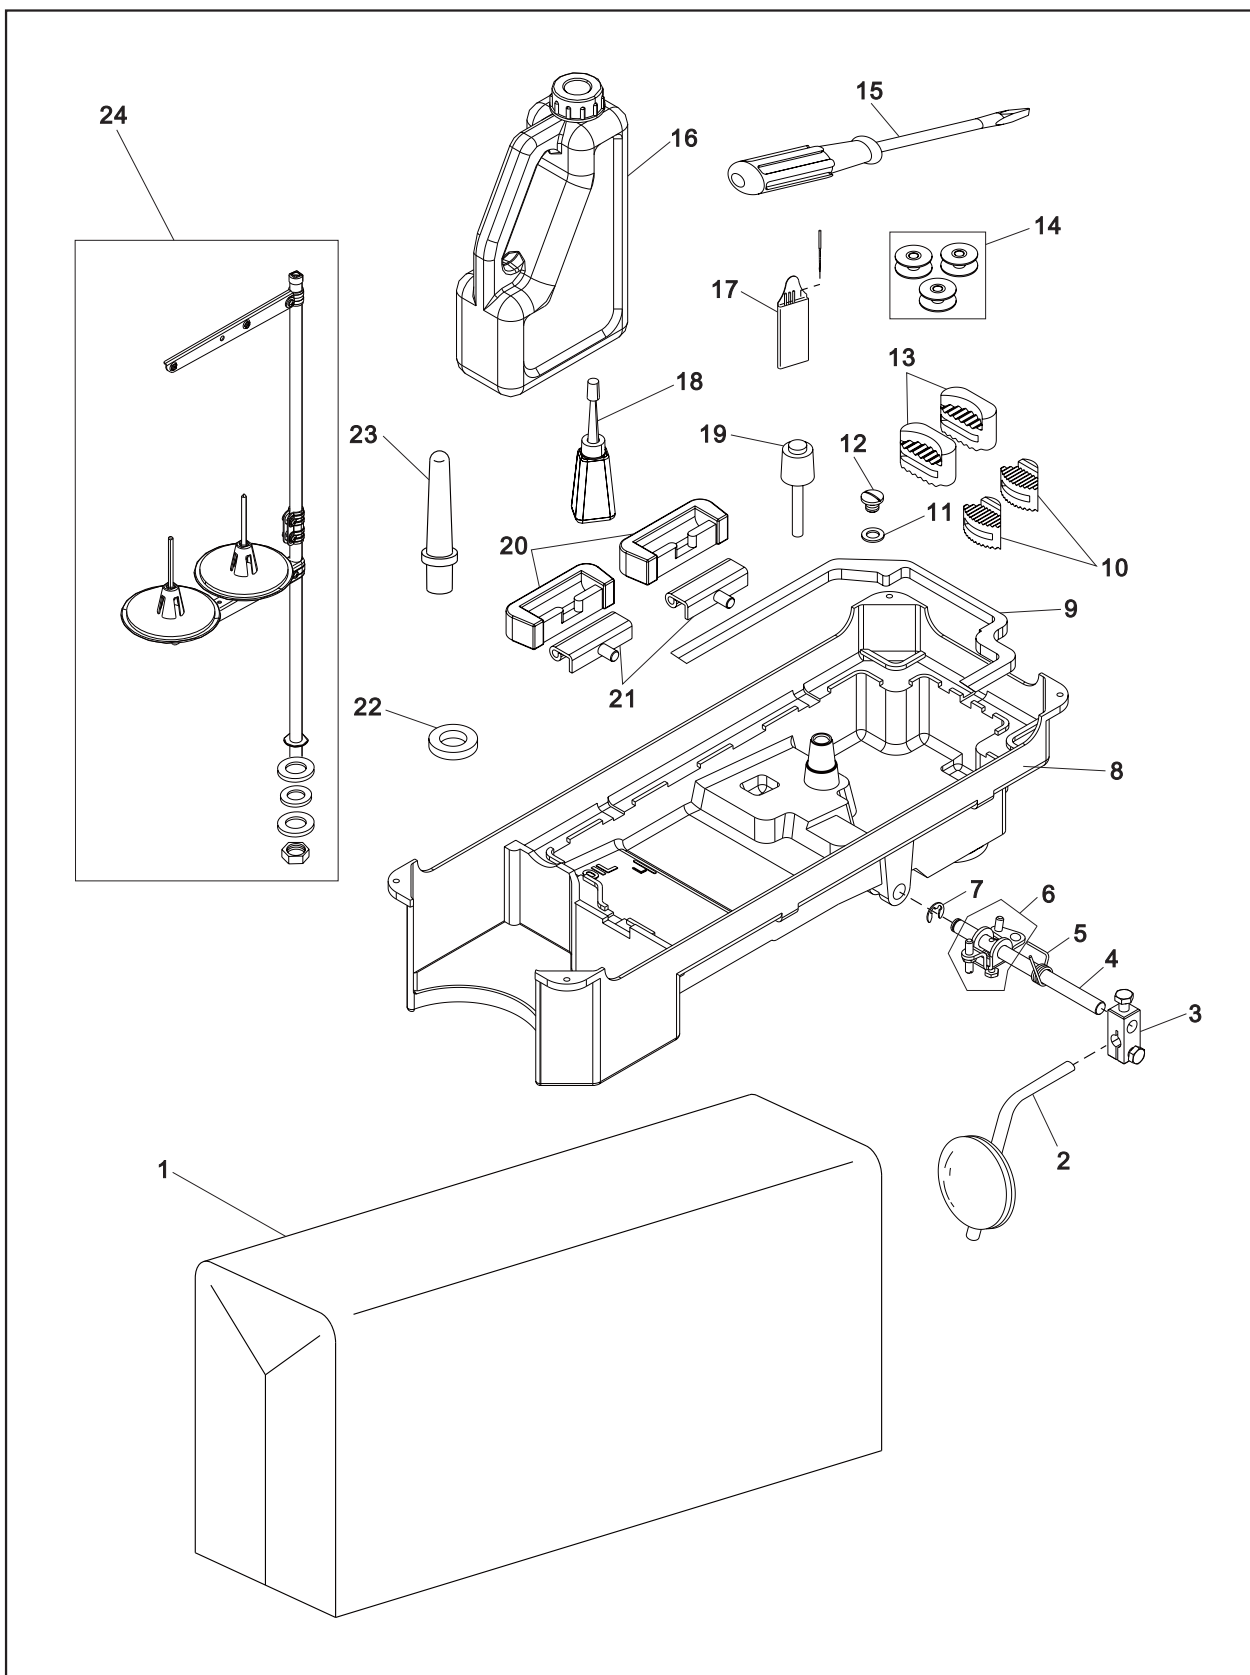

K. Accessories

Ref. No.	Part No.	Description	QTY	Remark
1	*	Dust cover	1	
2	10009985	Knee pressing plate ASM	1	
3	10002562	Knee pressing plate holder assy	1	
4	10044097	Hinge pin	1	
5	10044098	Spring	1	
6	10048792	Knee lifter stop bracket assy	1	
7	10003281	Washer 9	1	
8	10051347	Oil reseervoir	1	
9	10051348	Gasket	1	
10	10051560	Cushion	2	
11	10009263	Washer	1	
12	10043570	Screw	1	
13	10051308	Cushion (big)	2	
14	10007138	Bobbin	3	
15	10010995	Screwdriver (middle)	1	
16	10004455	Oil tank	1	
17	*	Needle	4	
18	10011155	Oil pot	1	
19	10009984	Knee lifter prop bar	1	
20	10011041	Hinge rubber	2	
21	10004466	Rubber coat	2	
22	10003892	Magnet	1	
23	10004514	Machine rest pin	1	
24	10007130	Spool stand complete	1	

HD *texi*®

Dealer:

--